

Technical specification

No.	Part	Material Specification	Remark
1	Handle	DI	ASTM A536
2	Driving Rod	S.S 304	ASTM A276
3	Indicator cover	CI	ASTM A126
4	Housing	CI	ASTM A126
5	Keyhold plate	A283 Gr.C	ASTM A36
6	Indicator plate	A413.0	ASTM S12A
7	Screwed plug	1035	ASTM A449
8	Extension rod	A283 Gr.C	ASTM A36
9	Flange	CI	ASTM A126
10	Connectong rod	1045	ASTM A29
11	Cotter Pin	1035	ASTM A449
12	Joint	CI	ASTM A126
13	Bolt	1035	ASTM A449
14	Bolt	1035	ASTM A449
15	Bolt	1035	ASTM A449
16	Driving nut	S.S. 304	ASTM A449
17	Keyhole plate gasket	EPDM	ASTM D2000
18	Indicator flap	Organic glass	

Installation instructions

- Remove the indicator cover
- Adjust the length of the connecting rod according to buried depth and cut off the excessive part
- Connect the indicator post and gate valve which is in the closed position
- Adjust the indicator to the position of "SHUT"
- Tighten the bolts between the flange of the indicator post and post flange of gate valve
- Install the indicator cover

